

x8



blum

DTC



x8



KESSEBÖHMER


HÄFELE



x4




1

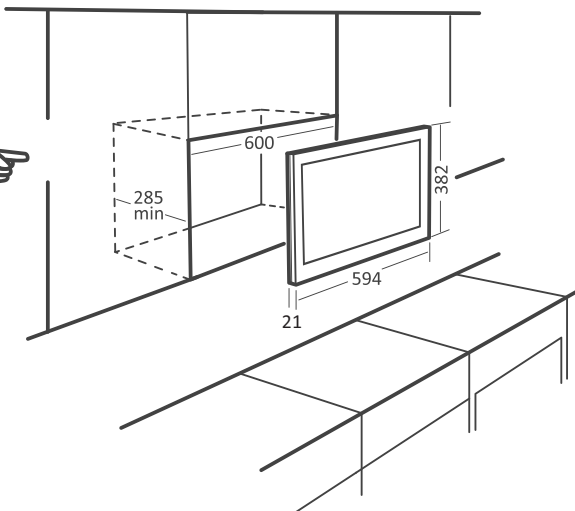


2



A

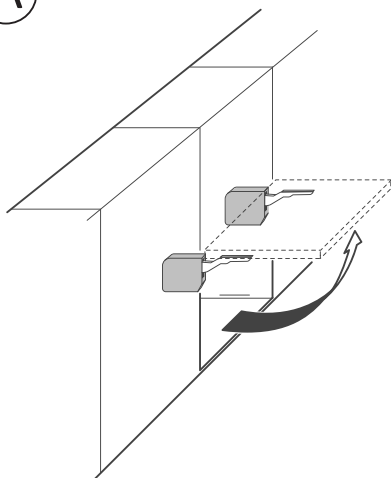

B

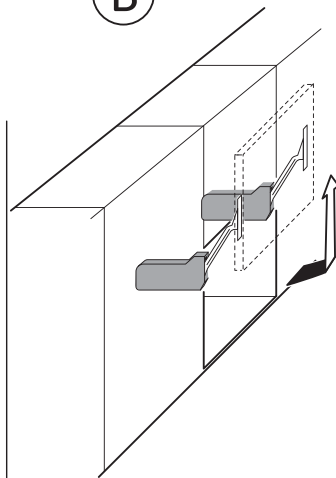

1

blum
Aventos HK27

+



2

DTC
DTC TOP STAY SF
SF00AH02A

+



3

KESSEBÖHMER
FREEflap forte-E

+

HÄFELE
Free Flap 3.15 E



1

blum
Aventos HL27/35

+



2

KESSEBÖHMER
FREEslide Q3us

+

HÄFELE
Free Up Q3us






A1




blum

Aventos HK27

DTC
Global Quality Benchmark

DTC TOP STAY SF

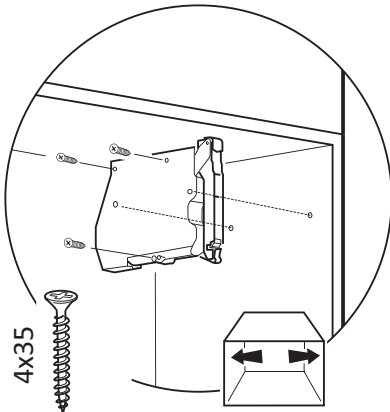
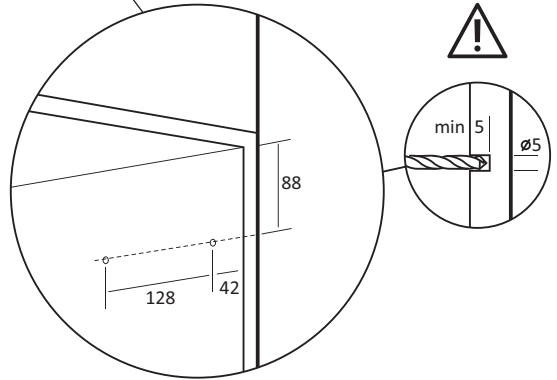
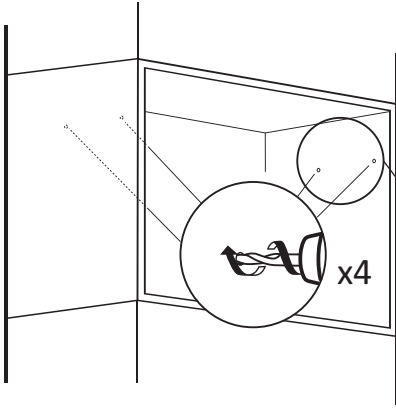


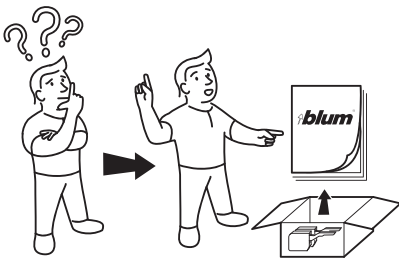
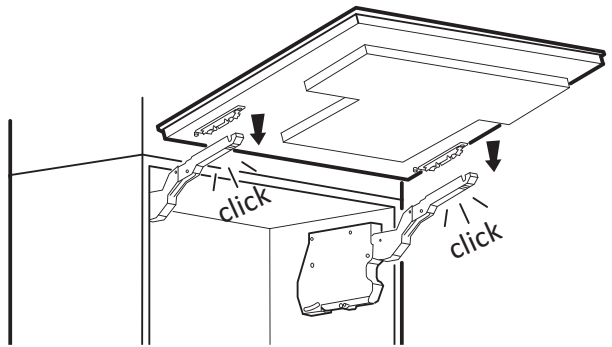
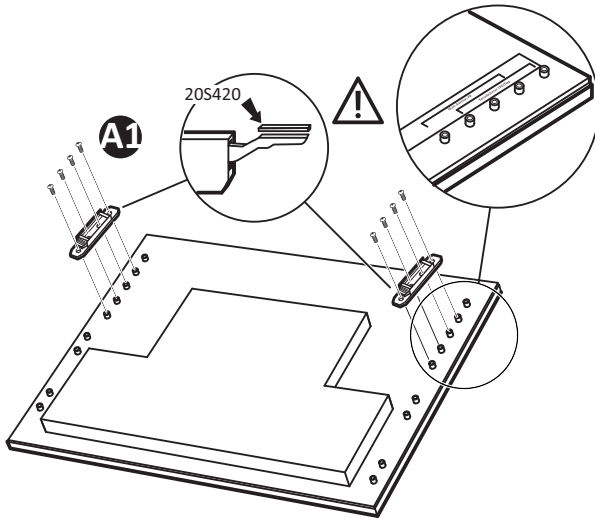


A2

blum

Aventos HK TOP27

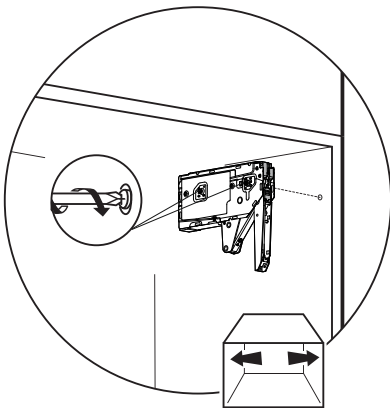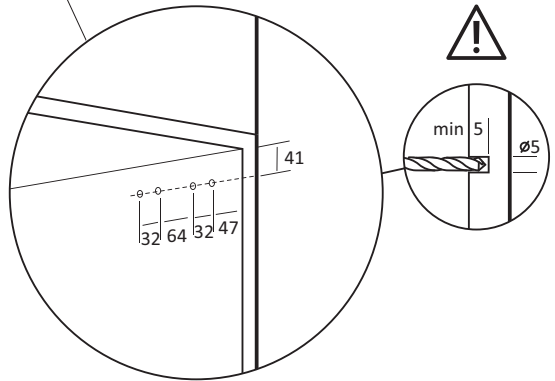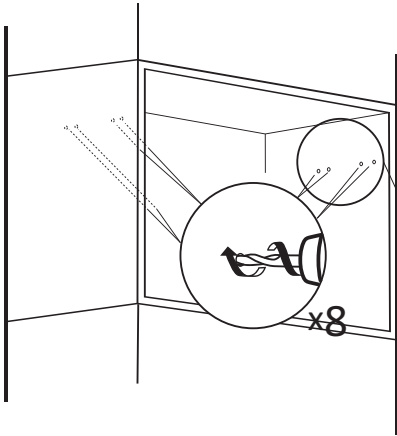


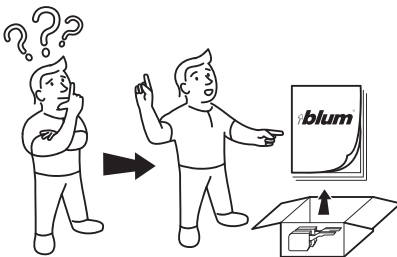
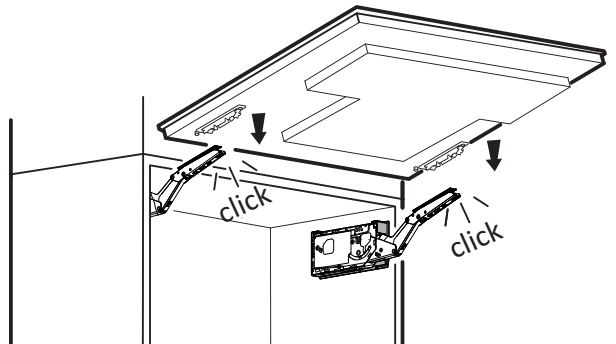
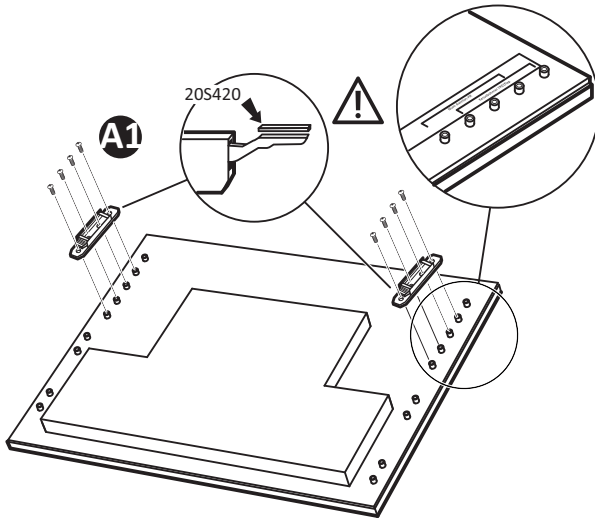


A3

KESSEBÖHMER
FREEflap forte-E

HÄFELE
Free Flap 3.15 E

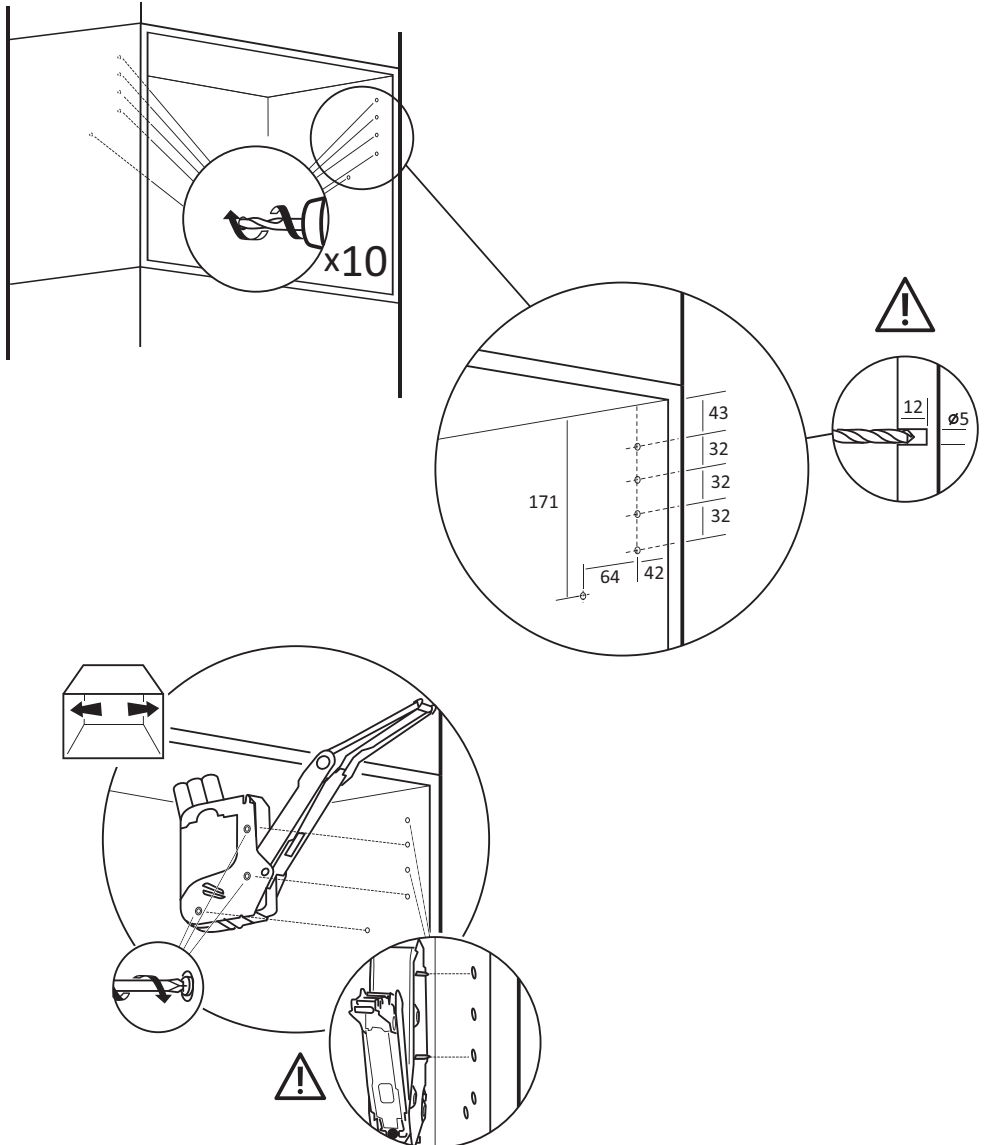



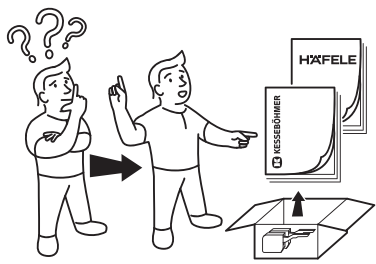
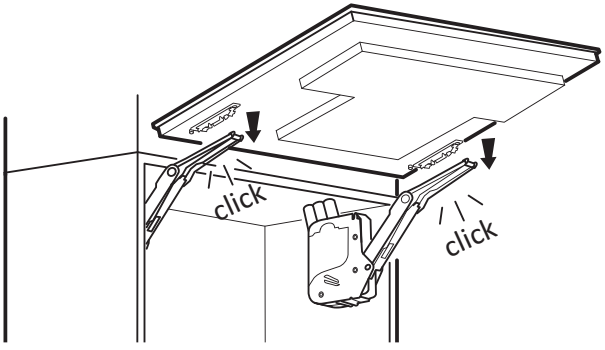
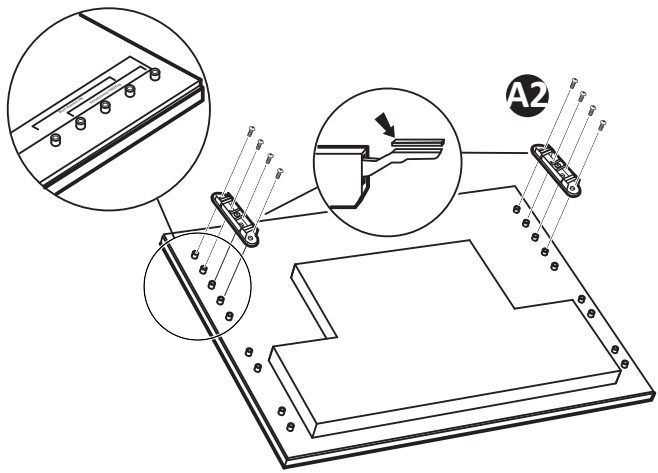


B1

blum

Aventos HL27/35



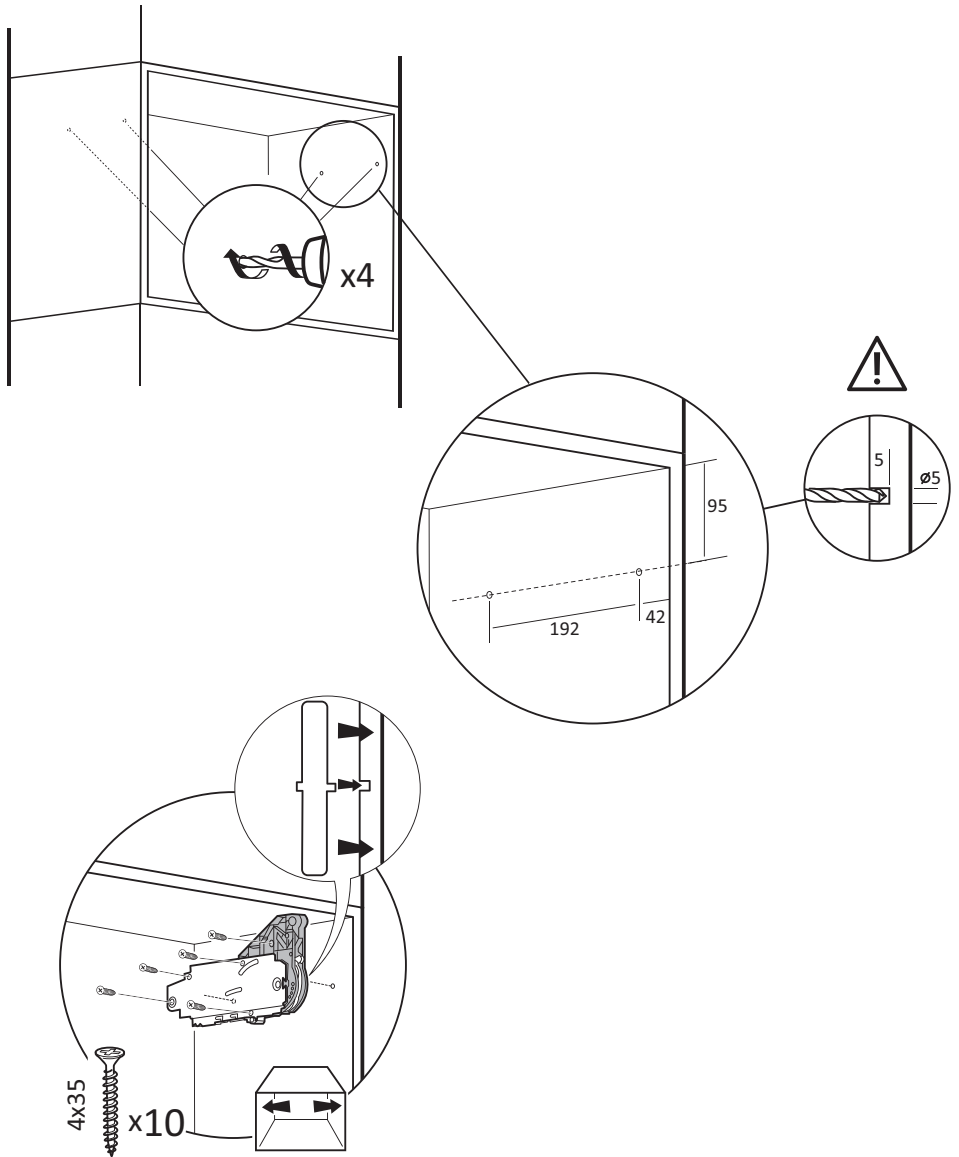


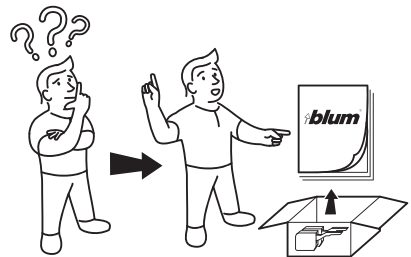
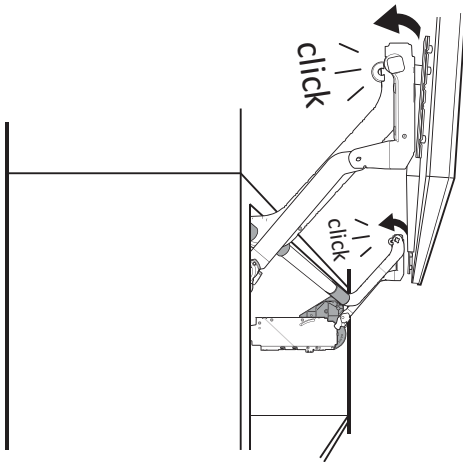
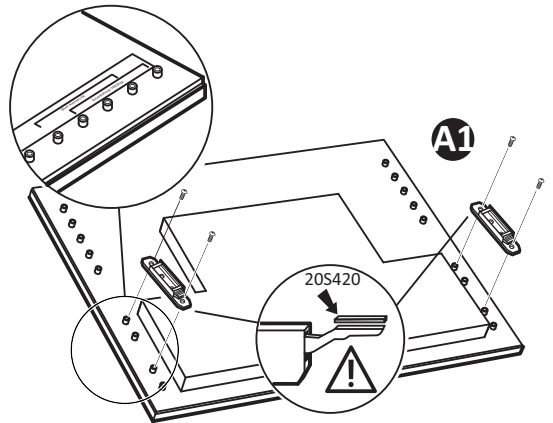
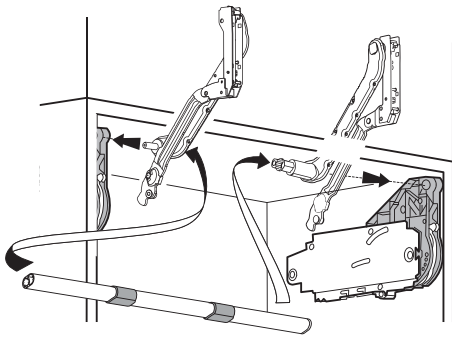


B2

KESSEBÖHMER
FREEslide Q3us

HÄFELE
Free Up Q3us

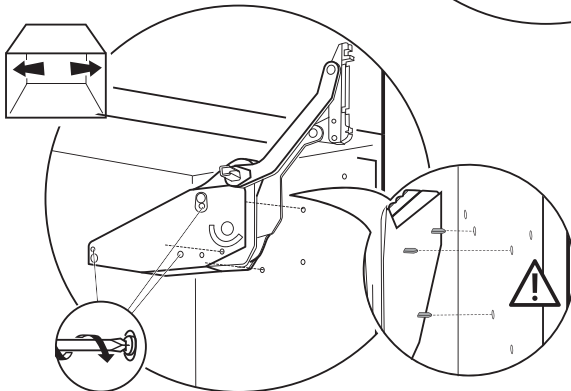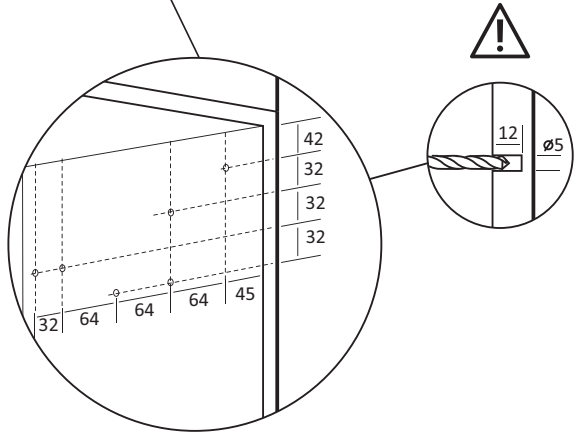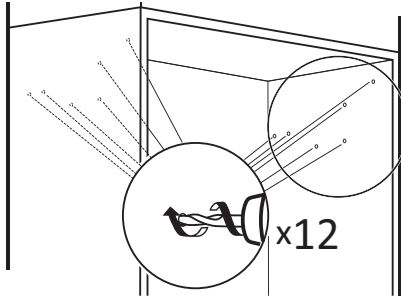


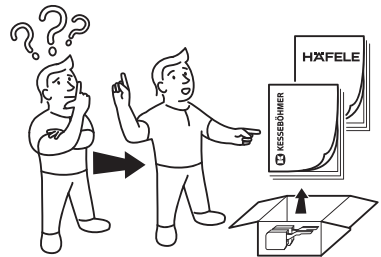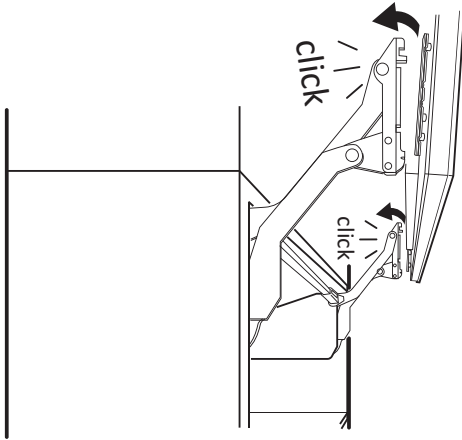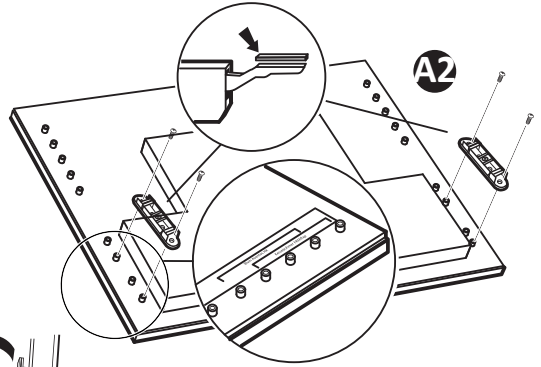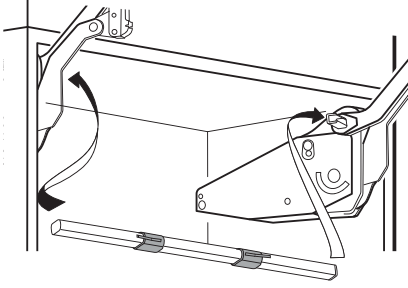


3




A

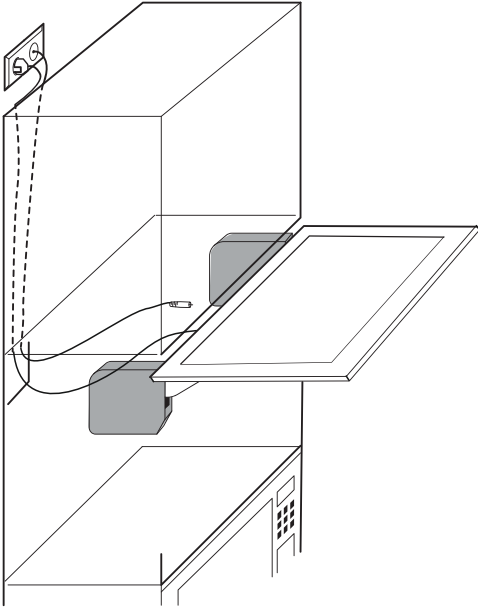




B

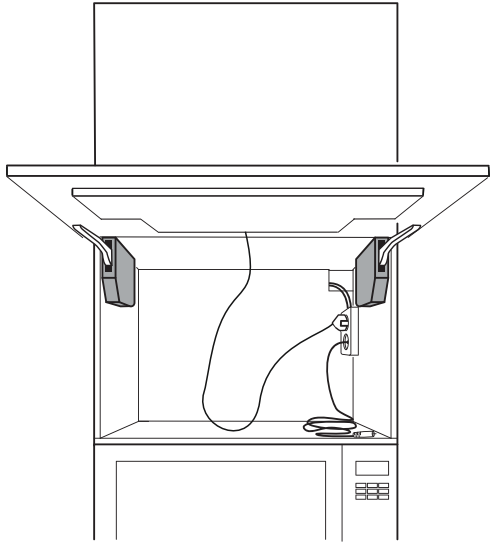





4

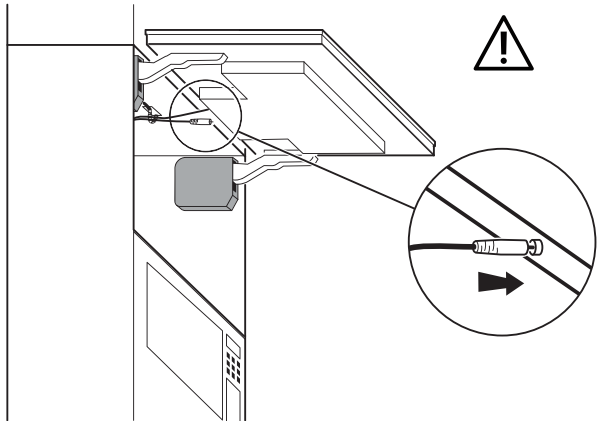

5

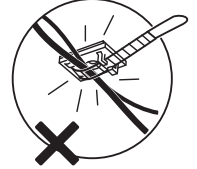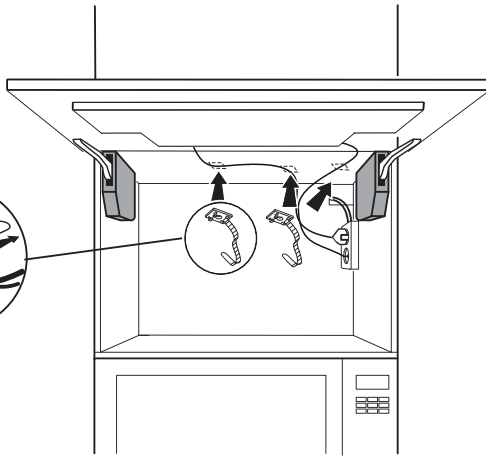
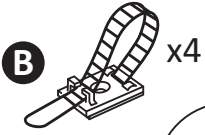


6

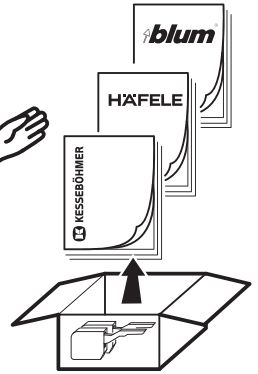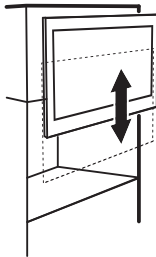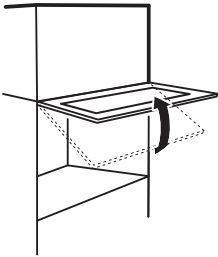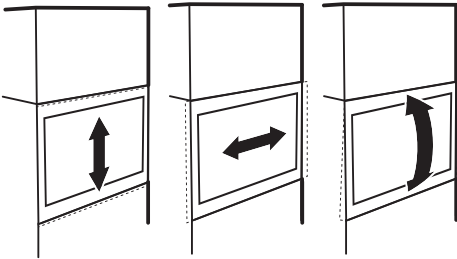

7

A

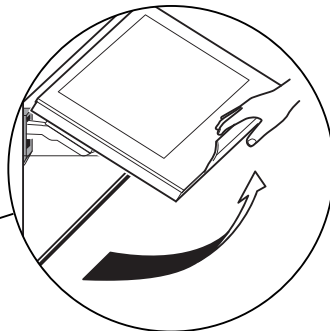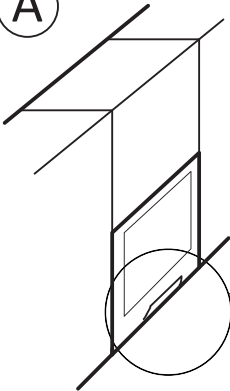

B

